

# BODY LOC


COLLISION REPAIR EQUIPMENT




## ROCKER LOC SET-UP

1. ALIGN VEHICLE OVER CENTER OF PATTERN
2. JACK UP VEHICLE & PUT IT ON ROLLER PLATES (PIC #1)  
(WHEN USING DEAD LEGS - BOLT THEM ON & LOWER VEHICLE - THE WEIGHT OF THE VEHICLE WILL ALIGN THE LEGS)
3. SLIDE STANDS UNDER VEHICLE & START THE ANCHOR BOLT (PIC #2) (DO NOT TIGHTEN ANCHOR BOLT)
4. ROTATE STAND UNTIL CLAMP ALIGNS WITH PINCH WELD
5. LIFT CLAMP ON TO PINCH WELD & TIGHTEN BOLTS (PIC #3)
6. TIGHTEN ALL ANCHOR BOLTS (AFTER ALL CLAMPS ARE ON & TIGHT) (PIC #4)
7. WHEN DOING AN UP PULL - LIFT RING & INSERT PIN (PIC #5)


PIC #1

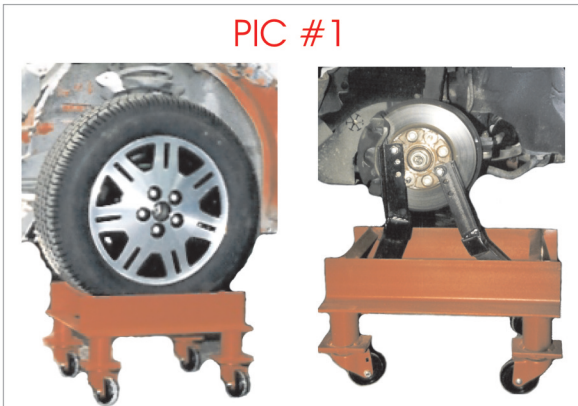

PIC #2

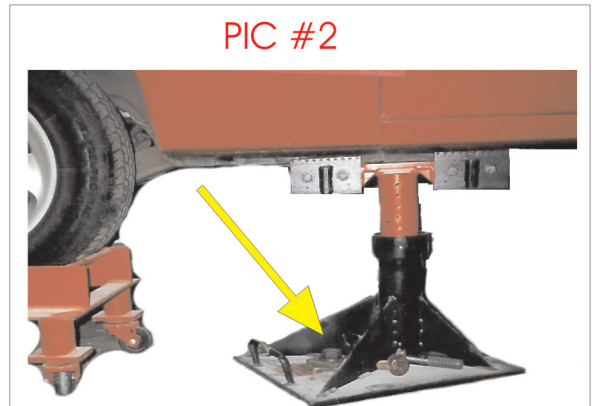

PIC #3

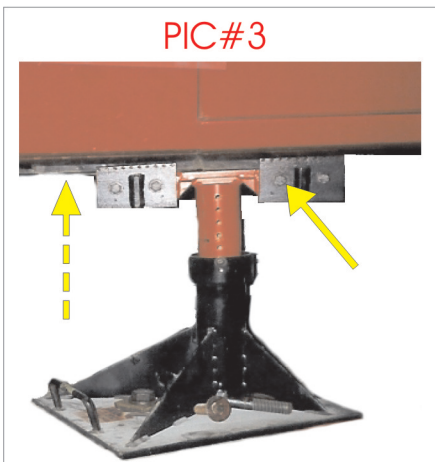

PIC #4



PIC #5

